


01

/Quick Start Wiring



USB CABLE
A-MALE to
MINI B

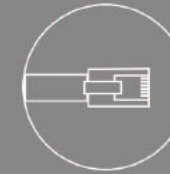

RJ11 REMOTE
CABLE (x2)




RELAY
TERMINAL



SYSTEM
GROUND




MAT GROUND

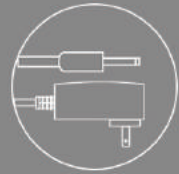


12V POWER
SUPPLY




MAT &
GROUND
TERMINAL

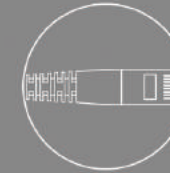

RJ45 ETHERNET
CABLE

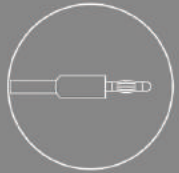

CIM CABLE
(x2)

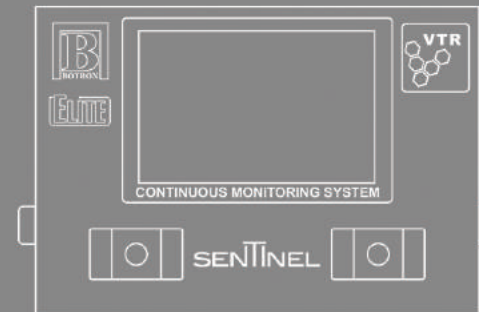

ELITE SENTINEL UNIT




OPERATOR
REMOTE 1




OPERATOR
REMOTE 2


SENTINEL (FRONT)

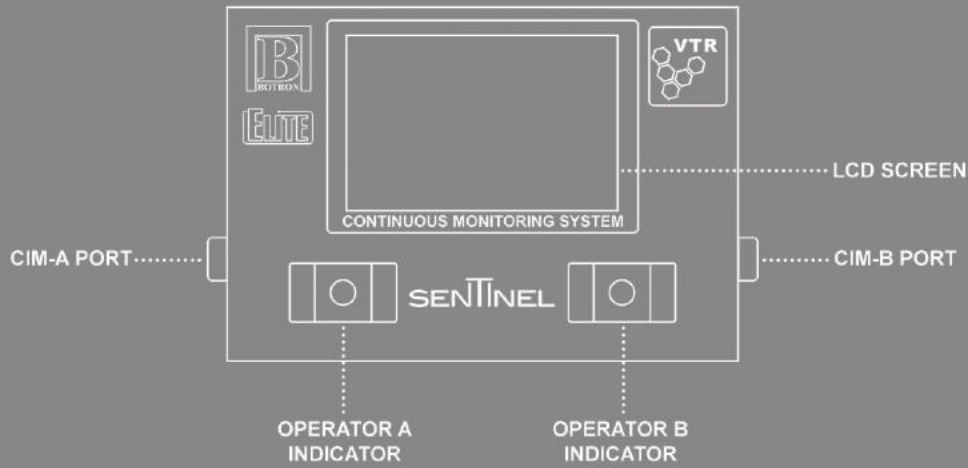

SENTINEL (SIDE)

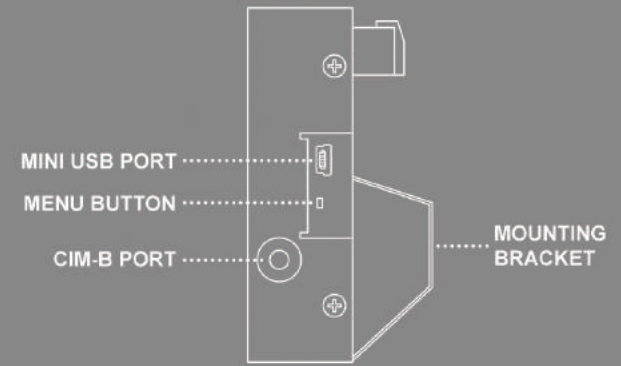


SENTINEL (BACK)

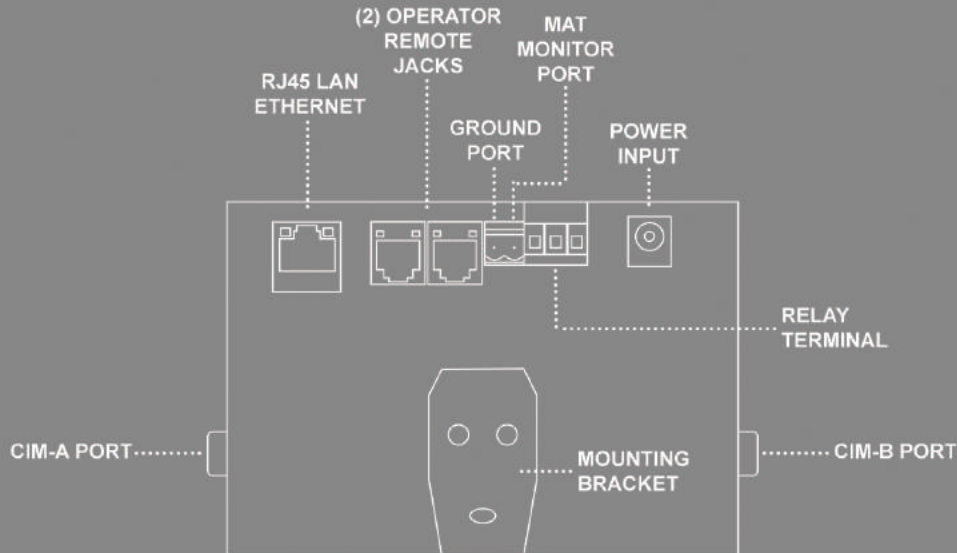


OPERATOR REMOTE (FRONT)



OPERATOR REMOTE (BACK)

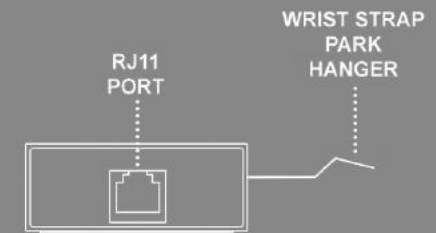

CONNECTION DIAGRAM

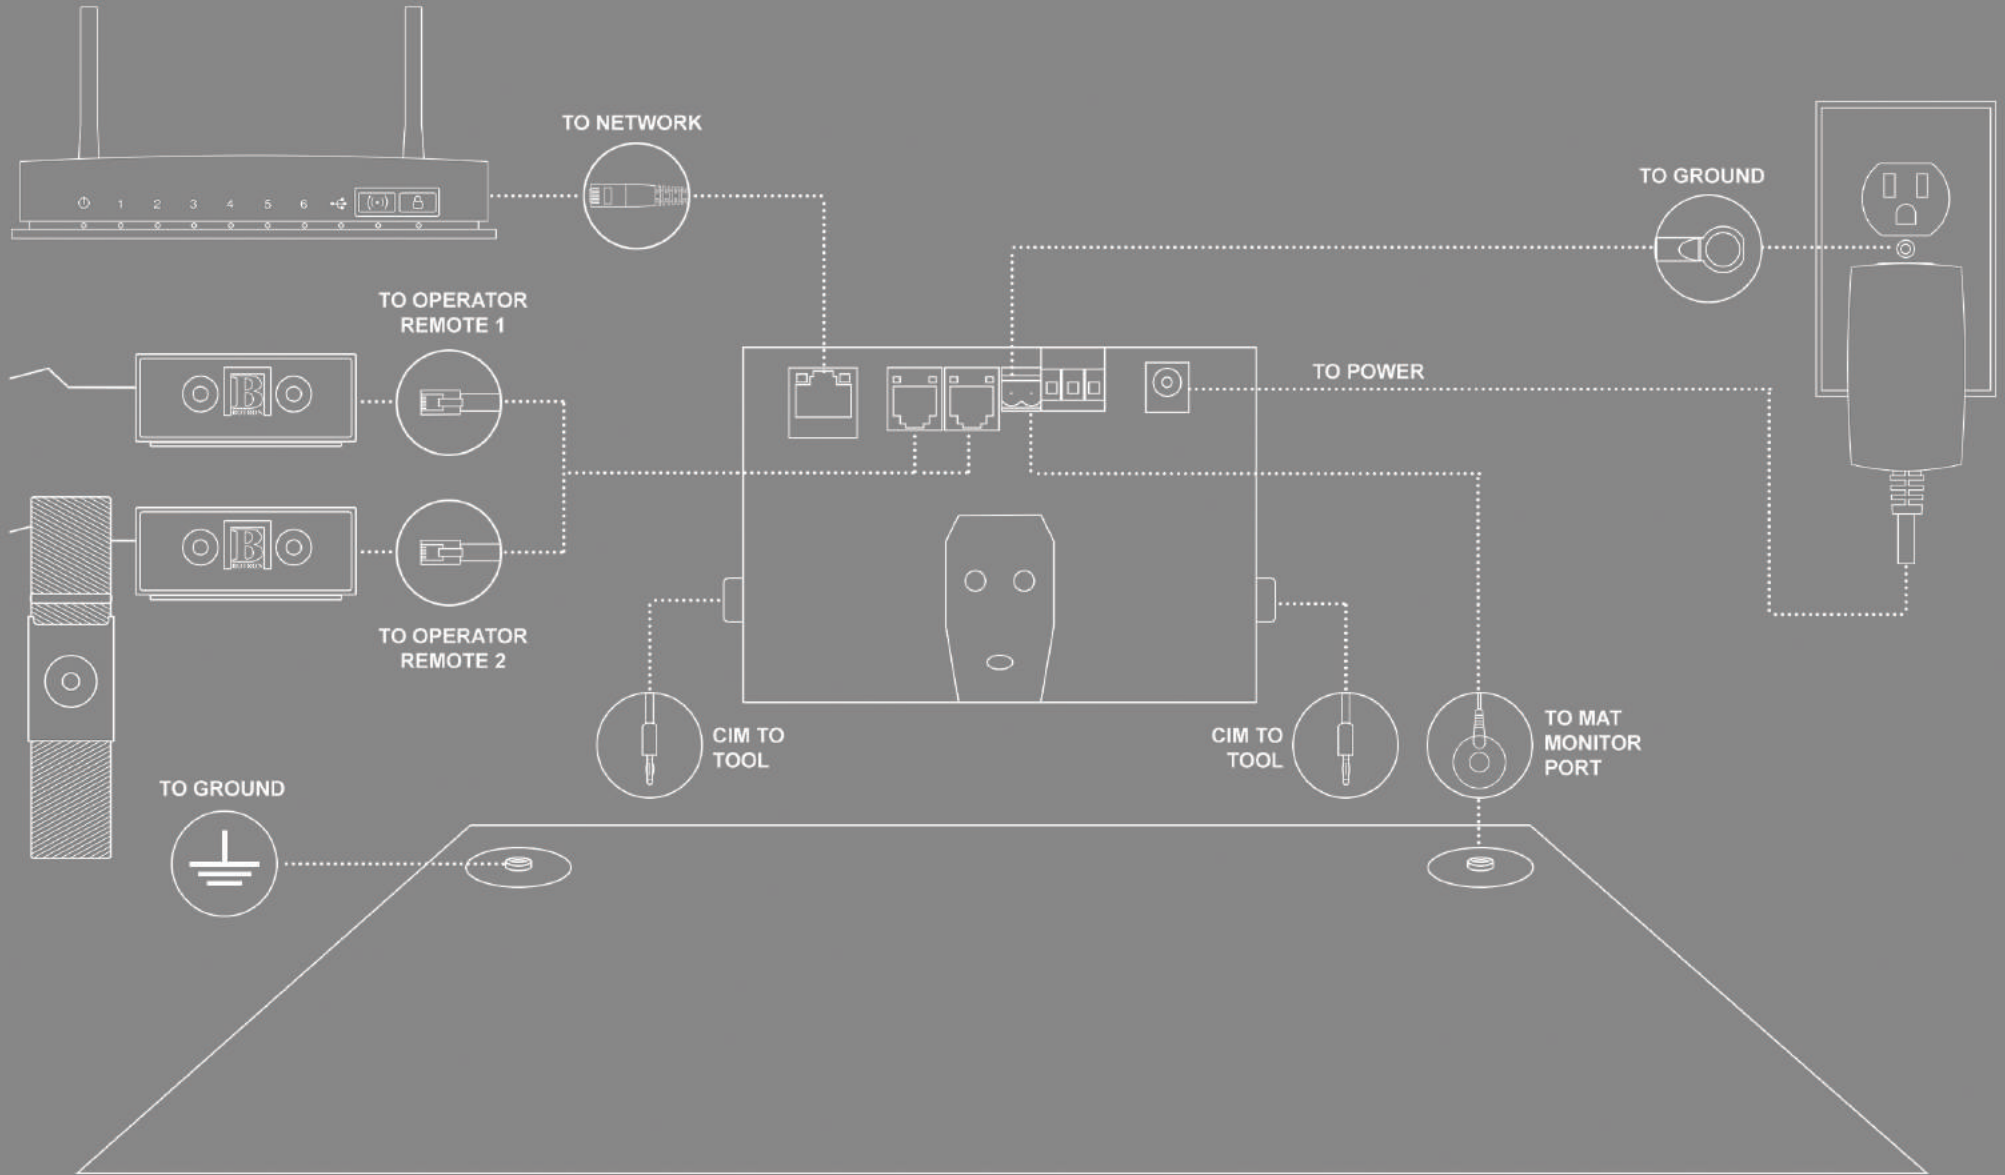

AN IMPORTANT NOTE

Please read this document and check that your system is set up carefully before you first use your ELITE Sentinel.

LEARN MORE

You can find more information and learn even more about ELITE features at www.botron.com/elite-sentinel.

SUPPORT


Your ELITE comes with 90 days of technical support and one year of hardware repair warranty coverage. For more information please contact:

Phone: 1-623-582-6700

email: elitesupport@botron.com

MAILING

Botron Company Inc.
21601 N. 21st Avenue
Phoenix, AZ 85027

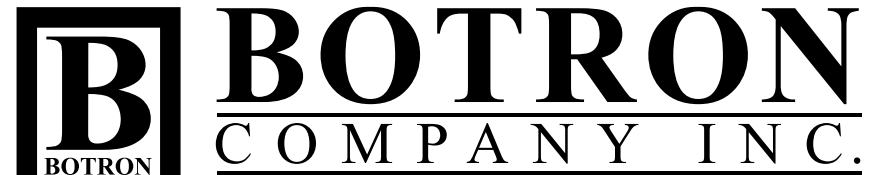

All rights reserved. Designed by Botron.