

Botron B75250 Technical Data Sheet



Cup design:

The cup of Botron's B75250 Heel Grounder is a symmetrical design that can be reversed when put on. It also features three layer rubber, with a non-marking interior/exterior layer. As with all of our static control heel grounders the B75250 has a 1.5" wide rubber, securing both at the back and underneath the heel. Its 7.5" length rubber provides enough cup volume to fit comfortably on those with larger shoe sizes.

Fastening System:


This is standard hook and loop velcro system. Measuring .75 wide by 7" in length its ergonomic design is for both comfort and practicality.

Grounding:

Our ESD heel grounders come standard with a conductive 24" ribbon. All resistors are built in and are available in 1meg.

Product Notes and Features

- 1) 7" Stretch Hook and Loop for Comfort Fit
- 2) 1Meg Resistor
- 3) 1.5" x 7.3" Cup w/ Non-Marking Interior/Exterior
- 4) 24" Conductive Nylon Ribbon

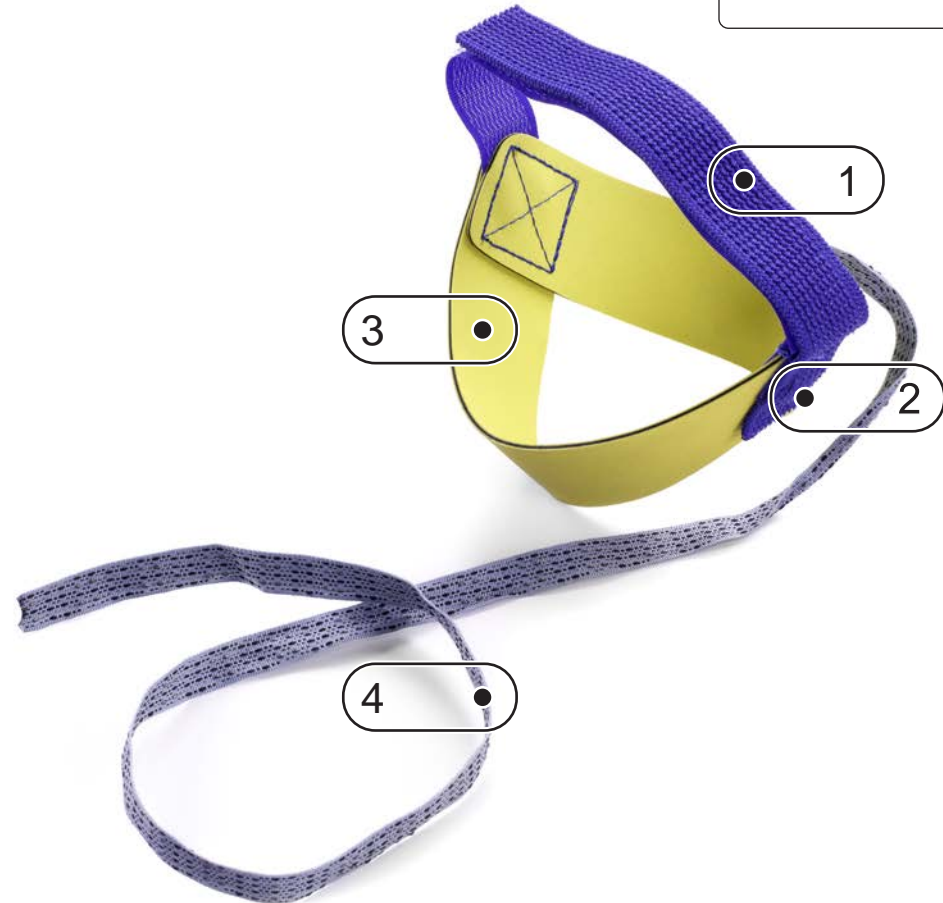

PROPERTIES

SPECIFICATIONS

Cup Design:	1.5" x 7.3" Three Layer Rubber
Sole Interior:	Non-Marking Rubber
Sole Exterior:	Non-Marking Rubber
Ribbon:	24" Conductive Nylon
Charge Decay:	<0.01Sec
Thickness:	0.080
Resistor:	1 MegOhm
RTG (w/ 1Meg):	5.1x10 ⁶ - 3 x10 ⁷
Standards:	ANSI/ESD S.20.20 & Mil 263
Fastening system:	¾" x 7" Stretch Hook & Loop
Packing:	1 per bag / bags of 10
Colors:	Yellow Rubber with Blue Velcro

INSTALLATION

1. Unfasten hook & loop strap and slip the rubber cup onto heel, black side down.
2. Fasten the hook & loop strap tightly over top of foot.
3. Trim conductive ribbon to desired length and place inside of sock or shoe. (skin contact is recommended)

RECOMMENDED USAGE

1. For safety reasons, it is recommended that heel grounders be worn on both right and left feet, in order to maintain a continuous path to the ground.
2. Conductive ribbon should be tucked inside the shoe or sock making as much contact with the skin as possible. Please take note, if ribbon is worn outside of the sock to maintain electrical contact, perspiration is needed in order to maintain an electrical contact with the heel grounder.
3. Heel grounders should be used in conjunction with a floor surface, and/or floor mat with a surface resistance less than 1×10^9 .

PART NUMBERS

B75250 Blue Velcro Yellow Heel Grounder

TESTING GUIDELINES

To properly test your heel grounders it is recommended to clean your heel grounder free of debris. Also check that the conductive ribbon is making adequate skin contact.

Botron recommends testing heel grounders with any of the following test equipment. B82251, B8211, B8225, B8506 and B88000.

If you obtain a fail reading, please check your heel grounder for wear as well good skin contact. Retest after inspection. If the unit still fails, replace the heel grounder.

Botron Company Inc. | 21601 N 21st Ave. Phoenix AZ 85027 | Ph# 623-582-6700 | Fax# 623-582-6776

Disclaimer. All statements of technical information are believed to be true and are based upon tests we believe to be reliable. The proper use and application for this product must be the responsibility of the user.

The statements herein shall have no force or effect.